

### **IMPORTANT SAFETY WARNINGS**

WE WANT YOU TO USE YOUR STERNO S'MORES MAKER AS SAFELY AS POSSIBLE. READ ALL WARNINGS, ASSEMBLY & OPERATING INSTRUCTIONS BEFORE USE.



## **WARNING: BURN AND FIRE HAZARD**

1. For use by adults and children under direct adult supervision.
2. Use this product ONLY with cans of Sterno S'MORES HEAT® cooking fuel (included with kit and sold separately).
3. Sterno S'MORES HEAT® cooking fuel is FLAMMABLE and an OPEN FLAME product. Use with caution to avoid burn injury and fire.
4. NEVER leave unattended when hot or in use.
5. NEVER wear loose clothing or allow long hair to hang freely while lighting S'MORES HEAT® or using the S'MORES MAKER.
6. ALWAYS Keep hands and face away from roasting surface and flame when product in use.
7. ALWAYS use this product on a level, stable and non-combustible surface.
8. NEVER use this product near curtains, drapes, rugs or other items that could catch fire or combust.
9. NEVER use this product inside an automobile, tent, trailer or other small enclosure. Sterno S'MORES MAKER should NEVER be used as a personal heating device or for any other purpose than cooking S'mores.
10. The can of S'MORES HEAT® will still continue to be hot even after extinguished. Allow 5 minutes to cool. Check temperature before removing.
11. NEVER move this product while Sterno S'MORES HEAT® cooking fuel is ignited.
12. S'MORES HEAT® is non-refillable and disposable. S'MORES MAKER is only intended for use with Sterno S'MORES HEAT®.

**WARNING: FLAMMABLE:** Contains ethyl alcohol. May emit flammable and harmful fumes if used in a poorly ventilated area. Avoid inhalation and skin contact. Use only in well-ventilated area. Keep away from heat, sparks and open flames. Do not smoke tobacco or other substances while using this product. KEEP OUT OF REACH OF CHILDREN. If swallowed, call a Poison Control Center or doctor immediately. **RINSE MOUTH AND DRINK PLENTY OF WATER. DO NOT INDUCE VOMITING.**



24-Hour Emergency Contact: 800-255-3924

S'MORES HEAT® is disposable. **DO NOT** refill canister. Once fuel can (S'mores Heat®) is used, rinse with hot soapy water to remove any remaining residue and place in household garbage. Local, regional and national authorities, applicable laws and regulations, should be consulted and followed to be sure that waste disposal procedures are proper in the area that the product is discarded.

**WARNING:** This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm.



Distributed by:  
Sterno Products, 1880 Compton Ave., Corona, CA 92881  
www.SternoProducts.com 951.682.9600

**MADE IN CHINA**  
S01370



PATENT PENDING

## **SAFETY & SET - UP INSTRUCTIONS**

### **WARNING**

Read and follow all warnings and instructions in this manual to avoid personal injury or property damage.  
Save this manual for future reference.

## SET-UP INSTRUCTIONS



**1.** Place S'mores Maker on a flat, firm surface. Peel the tape from the top of the S'mores Maker and remove the S'mores Heat® from the Suspension Frame.



**2.** Place S'mores Heat® on a flat surface and cautiously pry the lid off using a pop top opener or a blunt object. Position S'mores Heat® back into the Suspension Frame.




**3.** Fill the S'mores Maker with s'mores ingredients.



**4.** Place Roasting Forks in appropriate open slot as shown in image above.




**5.** Light the S'mores Heat® by using a long match or long reach butane lighter.

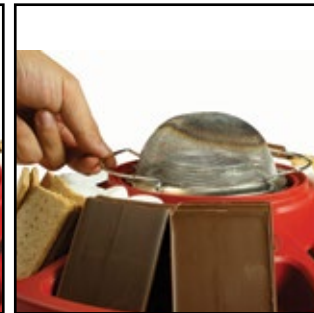

**6.** Place Roasting Safety Screen on top of the Suspension Frame. Use Roasting Forks to toast your marshmallows.

## ASSEMBLY DIAGRAM

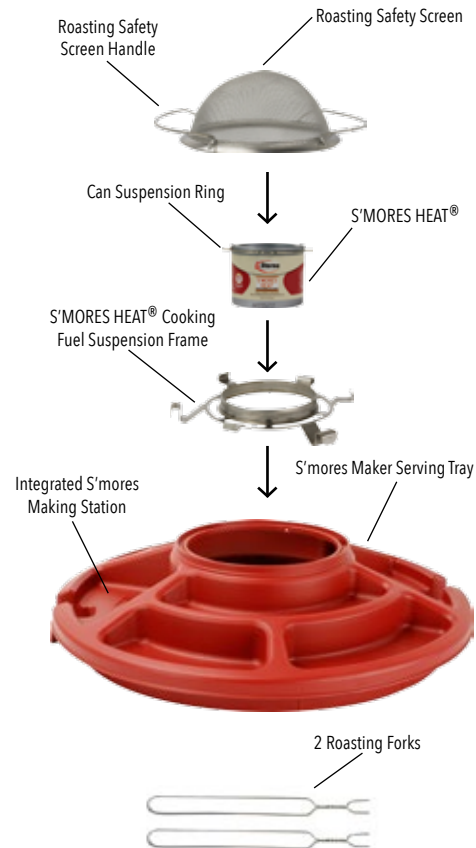

## MAKING A S'MORE



**1.** Take your graham cracker and place a piece of chocolate over it, position it on the S'mores Making Station.



**2.** Attach your marshmallow to the Roasting Fork, place over the lit S'mores Heat® Roasting Screen, hold and then rotate until brown.



**3.** Place roasted marshmallow onto the chocolate from step 1, place top graham cracker onto marshmallow, push down slightly as you slide out roasting fork, and enjoy!

**CAUTION** - Marshmallow will be hot - handle with care.

## EXTINGUISHING



**1.** Carefully remove roasting Safety Screen by its handles.  
**CAUTION:** Roasting Safety Screen is **HOT**.



**2. DO NOT BLOW OUT FLAME**  
Place **inverted** Roasting Safety Screen over the can to extinguish flame.



**3.** Allow all components of S'mores Maker and S'mores Heat® can to cool for at least 5 minutes before handling.

## BEST PRACTICES

- Unused fuel, matches or lighters should be stored in a child-safe place, away from heat sources and combustibles (ie: paper napkins or paper plates).
- In case of **S'MORES FIRE:** Use a Class B (CO2) rated fire extinguisher, extinguishing powder or baking soda for a small fire. **DO NOT** attempt to fight a large or spreading fire. Move to a safe place and immediately call 9-1-1 or other local fire emergency response for help.

## PROPER CARE & CLEANING

- Extinguish flame and allow all components to completely cool, before washing.
- S'mores Maker Serving Station, Roasting Safety Screen, Cooking Fuel Suspension Frame and Roasting Forks are dishwasher safe OR may be washed with a non-abrasive cleaner.
- Slight discoloration of roasting surface after use is normal and will not affect future performance. **DO NOT** use if Safety Screen, Suspension Frame or Serving Tray become broken, bent or otherwise damaged.